



>> Use (*)

Given their construction (fully dipped gloves) these products are perfectly tight to certain liquids. They resist, for example against detergents used for dishwashing. LAT2004 gloves can be used for general cleaning, light maintenance works... To ensure lasting use, avoid contact with animal fats and oil. The glove is not recommended for use against paraffin, kerosene or petroleum products. It is also not suitable for use against solvents, acids and alkalis.

>> Technical features

- ✓ **Construction:** Latex unsupported. Unflocked. Embossed diamond pattern on palm.
- ✓ **Material:** latex coating.
- ✓ **Color:** natural.
- ✓ **Sizes:** 7, 8, 9, 10.
- ✓ **Length:** 280 mm (+/-10 mm) (*).
- ✓ **Thickness:** 0.39 mm. (+/- 0.05 mm) (*).
- ✓ **Packing:** - carton of 100 pairs.
- bundle of 10 pairs.
- under individual polybag

Learn more: www.singer.fr

(*) Average values



>> Advantages

- ✓ The guarantee and benefits of an **ISO 9001** certified manufacturing: quality of products, regularity...
- ✓ **ISO 14001** certified factory, environmental friendly.
- ✓ Only the highest grade raw material are used in the manufacturing processes.
- ✓ Anatomically shape.
- ✓ Embossed palm and fingers for better grip.
- ✓ In individual hygienic packaging for a better conservation of the product.

>> Conformity

This glove has been tested according to the following European standards :

- **EN 420 : 2003 + A1 : 2009.** Protective gloves - General requirements and test methods.
- **EN 388 : 2016.** Protective gloves against mechanicals risks.
- **EN ISO 374-1: 2016.** Protective gloves against dangerous chemicals and micro-organisms.
Part 1. Terminology and performance requirements for chemical risks.
- **EN 374-2: 2014.** Protective gloves against dangerous chemicals and microorganisms.
Part 2. Determination of resistance to penetration.
- **EN 16523-1: 2015.** Determination of material resistance to permeation by chemicals.
Part 1: Permeation by liquid chemical under conditions of continuous contact.
- **EN 374-4: 2013.** Protective gloves against chemicals and micro-organisms.
Part 4. Determination of resistance to degradation by chemicals.
- **EN ISO 374-5: 2016.** Protective gloves against dangerous chemicals and micro-organisms.
Terminology and performance requirements for micro-organisms risks.


It complies with European **Regulation (EU) 2016/425** on Personal Protective Equipment (PPE). **Category III.**

EU type examination certificate (**module B**) issued by **SATRA (Ireland)**. Notified body n°2777.

Conformity to type based on quality assurance of the production process (**module D**) set out in

Annex VIII of Regulation (EU) 2016/425 is carried out by the notified body **SATRA (Ireland)**. Notified body n°2777.

Download the EU declaration of conformity on: <http://docs.singer.fr>

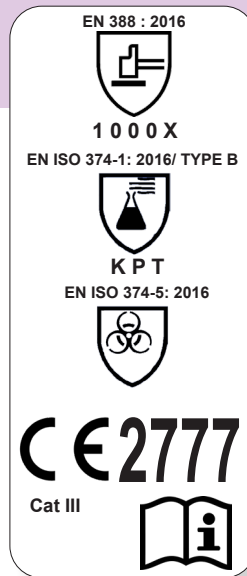

Your distributor **SINGER® SAFETY**



EN 388: 2016. Protective gloves against mechanical risks

Mechanical data. Information about levels.	Level 1	Level 2	Level 3	Niveau 4	Level 5	Levels ▼	
Abrasion resistance (number of cycles)	100	500	2000	8000	-	1	
Blade cut resistance (index)	1,2	2,5	5,0	10,0	20,0	0	
Tear resistance (in Newtons)	10	25	50	75	-	0	
Perforation resistance (in Newtons)	20	60	100	150	-	0	
Cut resistance (as per EN ISO13997) (TDM test)	Level A	Level B	Level C	Level D	Level E	Level F	Level
	2	5	10	15	22	30	X

EN 388 : 2016



«X» means that the glove has not been submitted to the test.
«0» means that glove doesn't meet the minimum requirement for level 1



EN ISO 374-1: 2016 / TYPE B.

Protective gloves against dangerous chemicals and micro-organisms.
Part 1. Terminology and performance requirements for chemical risks.

EN ISO 374-5 : 2016.

Protective gloves against dangerous chemicals and micro-organisms.
Terminology and performance requirements for micro-organisms risks.

Type B gloves are gloves that have passed
i) penetration test as per EN374-2:2014 (water leak & air leak test)
ii) achieved at least **Level 2 (more than 30 min** breakthrough time) for chemical permeation test as per EN16523-1:2015 against minimum **3 chemicals** from the list of 18 test chemicals on Table 2 of EN ISO 374-1:2016.
The 3 tested chemicals are represented by their code letter and marked under the pictogram and
iii) have performed chemical degradation test as per EN374-4:2013 for each chemical claimed and the results are as reported here.

EN ISO 374-1 : 2016 / TYPE B	EN ISO 374-5 : 2016	Chemicals ▼	Code ▼	Class ▼
		Sodium hydroxyde 40 %	K	6
		Hydrogen peroxid 30%	P	6
K P T		Formaldehyde 37%	T	6

EN 374-4: 2013.

Protective gloves against chemicals and micro-organisms.
Part 4. Determination of resistance to degradation by chemicals.

Chemicals ▼	Code ▼	Degradation ▼	Appearance of the sample after test ▼
Sodium hydroxyde 40 %	K	- 32.4 %	Swollen and discoloured
Hydrogen peroxid 30%	P	- 4.4 %	Swollen and discoloured
Formaldehyde 37%	T	- 17.5 %	Swollen

EN ISO 374-1: 2016

Chemical Permeation Performance levels

Measured breakthrough time (min)	Permeation performance level
> 10 min	Class 1
> 30 min	Class 2
> 60 min	Class 3
> 120 min	Class 4
> 240 min	Class 5
> 480 min	Class 6

Your distributor **SINGER® SAFETY**

